

Data migration from APE to AMS

Table of contents

| 1 | Security | 4 |
|-----|--|----|
| 2 | Overview | Į |
| 3 | Migration support tools | • |
| 4 | Migrating the data | |
| 4.1 | Exporting the data | 7 |
| 4.2 | Importing the data | 8 |
| 5 | Configuring log files | 17 |
| 6 | Detailed overview of the migrated data | 19 |
| 7 | Restrictions | 2: |

4

1 Security

Use latest software

Before operating the device for the first time, make sure that you install the latest applicable release of your software version. For consistent functionality, compatibility, performance, and security, regularly update the software throughout the operational life of the device. Follow the instructions in the product documentation regarding software updates.

The following links provide more information:

- General information: https://www.boschsecurity.com/xc/en/support/product-security/
- Security advisories, that is a list of identified vulnerabilities and proposed solutions: https://www.boschsecurity.com/xc/en/support/product-security/security-advisories.html

Bosch assumes no liability whatsoever for any damage caused by operating its products with outdated software components.

5

2 **Overview**

This document describes the process of data migration from the Access Professional Edition 3.8 (APE 3.8) software to the Access Management System (AMS) software (version 3.0 onwards).

Note: The Access Management System (AMS) software should not be installed on the computer where Access Professional Edition (APE) is installed.

3 Migration support tools

The data migration from APE to AMS is supported by tools that can be found in the AMS installation media in the folders:

\AddOns\Standard\ImportExport\
\AddOns\Standard\ImportExport\APE Migration\

- APE migration.exe exports APE data and creates the necessary output files for a successful data migration.
 - ACEAuthorizations.csv
 - ACEPersons.csv
 - ACEVisitors.csv
 - Photos.zip
- ImportExportInstaller.exe installs the Importer-Exporter tool to import APE data into the AMS system.

Notice!

These tools migrate only personnel data.

Authorizations used in APE are migrated with their respective validity periods.

The authorizations of a person and the corresponding period are visible in the **Persons** dialog.

All authorizations assigned to a person are visible in the **Authorizations** dialog. If you also migrate ACEAuthorizations.csv, you will also see the unassigned permissions.

However, the hardware configuration requires manual intervention:

First, create the device structures in the target system, for example, MAC, AMC, entrances. Next assign the entrances to the authorizations manually.



2024-05 | 5.5.0.1 |

7

Migrating the data 4

4.1 **Exporting the data**

Prerequisites:


- APE is installed.
- The APE SDK is installed from the same installation media as the APE version that you have installed. This is to ensure that the versions of APE and its SDK are compatible.
- The following folder is copied from the AMS installation media to the computer where APE is running.\AddOns\Standard\ImportExport\APE Migration\ It contains the executable APEMigration.exe and its auxiliary files.

Procedure

- On the computer where APE is running, start APEMigration.exe from the folder that you copied as a prerequisite above.
- A login dialog box opens.



- 2. Enter your APE administrator user credentials.
- 3. Click Login.
- Click Export.

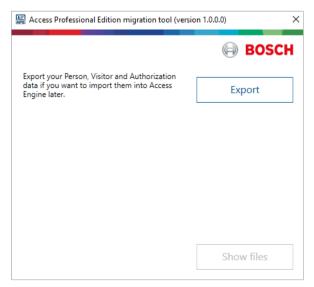


Personnel data is exported and four output files are created:

- ACEPersons.csv
- ACEVisitors.csv
- ACEAuthorizations.csv
- Photos.zip



Notice!

Photos.zip is not shown in the dialog box, but has been exported.

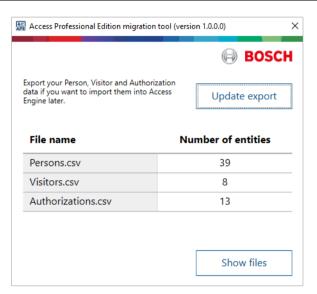

5. Click **Show files** to open the file location, or click **Update export** to restart the export.



Notice!

The exported files will be the input for the **AMS ImportExportTool** and must be available when starting the tool.



Notice!

Import the data once only, and thereafter, keep both systems (APE and AMS) updated manually.



Notice!

Make sure that all personal data stored during the migration is handled according to GDPR conformity (applicable to EU citizens only).

4.2 Importing the data

Prerequisites:

- Have AMS (version 3.0 or later) installed.
- Have the APE data export files available.
- Have the latest version of the AMS Import Export Tool installed. It is found on the AMS installation media in the folder: \AddOns\Standard\ImportExport
- Have a user with SDK rights configured in AMS.

9



Notice!


Make sure that the user that will be importing the data has the user rights to use the AMS SDK, otherwise it is not possible to use the AMS Import Export Tool.

Notice!



Import the data once only and keep both systems (APE and AMS) updated manually. For detailed information on how to manually configure the data in AMS, see chapter Creating and managing personnel data, in the AMS Configuration and Operation manual. The AMS Configuration and Operation manual can be found in the Help file of AMS, or in the Bosch Security Systems online product catalog, in the AMS product page, under Downloads > Literature.

- Start the AMS Import Export Tool. 1.
- Enter your User Name and Password, and click Log in.

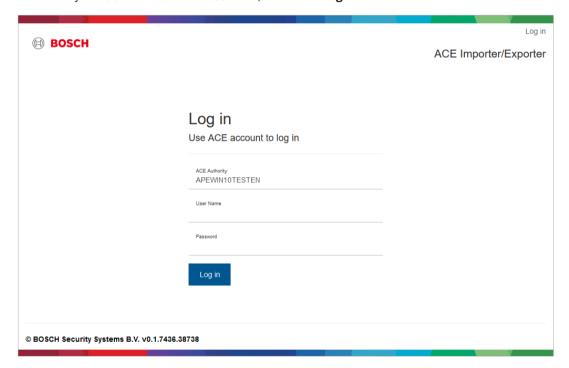


Make sure that the log files are configured correctly (see Configuring log files, page 17).




Notice!


Create a template for every export file. You will end up with 3 templates: one for the ACEPersons.csv, one for the ACEVisitors.csv, and one for the ACEAuthorizations.csv. In the Import section, click + New to create a new template to configure the data structure.

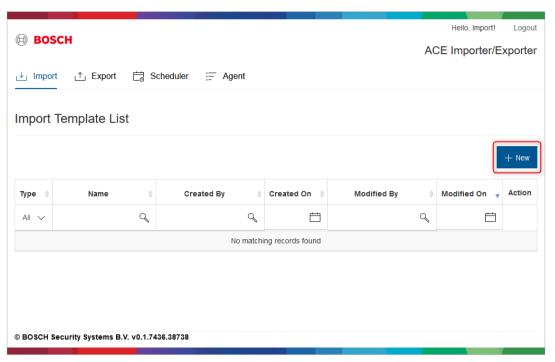


- In the Select Import Template Source dialog box, select the source type CSV from the drop-down list.
- 6. Click Add.
- You are redirected to the Create Import Template area, 1 Basic Configuration.

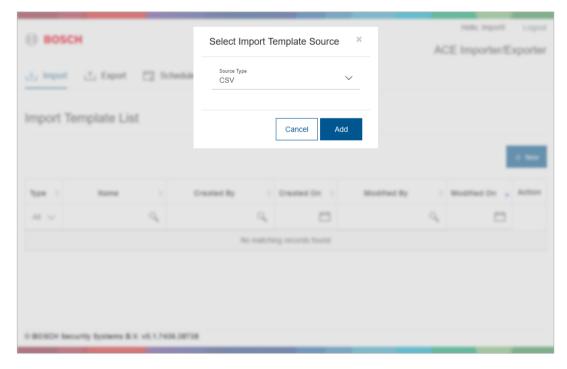


Under Name, enter a name for your import (e.g. APEDataImportPerson).

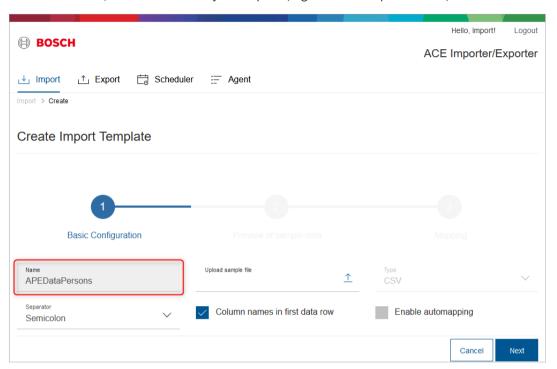


Under Upload sample file, select one of the files that has been previously exported from APE 3.8 (e.g. ACEPersons.csv).

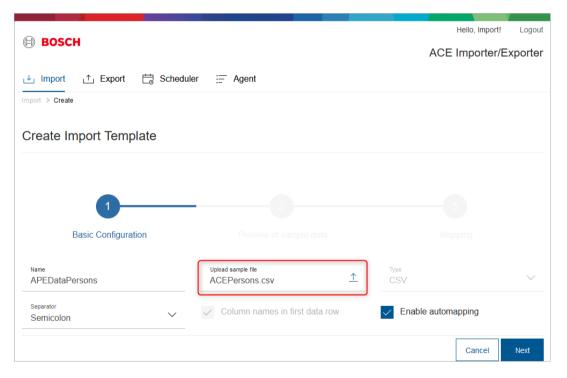

Select the **Enable automapping** selection box.

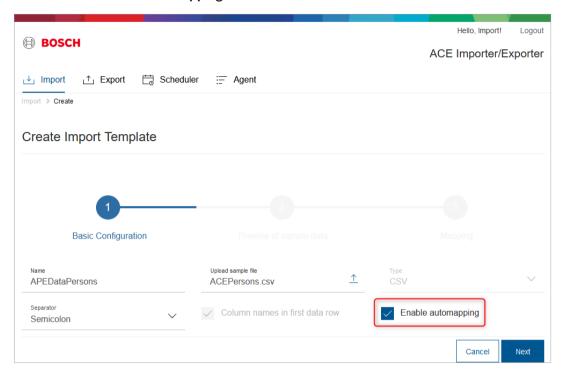


10. Under Additional data, select the import photo mode From Zip file from the drop-down list.

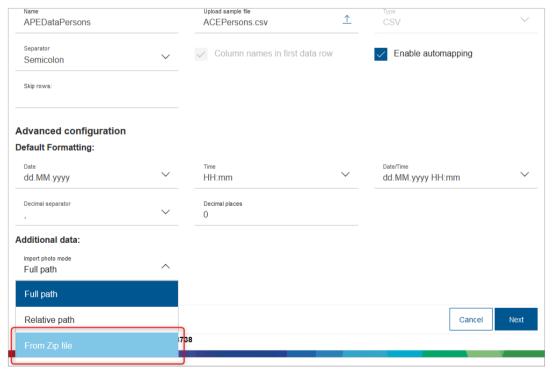


- 11. Click Next.
- You are redirected to the Create Import Template area, 2 Preview of sample data.

12. Check the sample data preview.

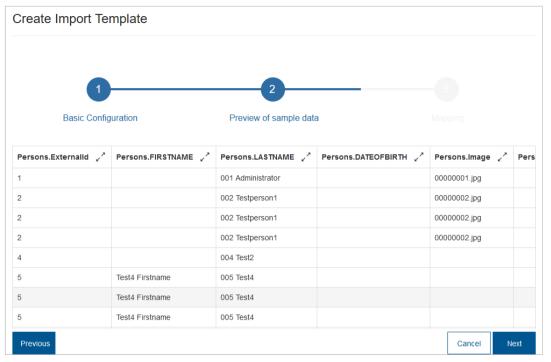


- 13. Click Next.
- You are redirected to the Create Import Template area, 3 Mapping.
- 14. Select the Add entities selection box.

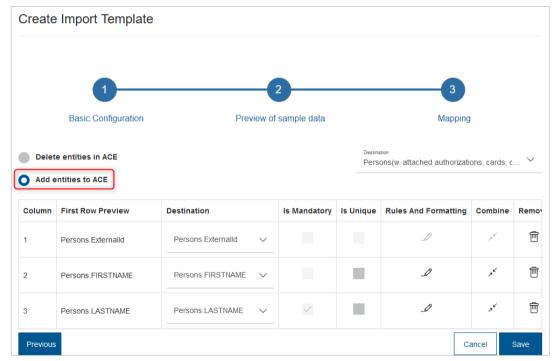


- 15. Click Save.
- You are redirected to the Limport section.


16. In the **Import Template List**, under **Action**, click on the import icon $\stackrel{\checkmark}{\sqcup}$.

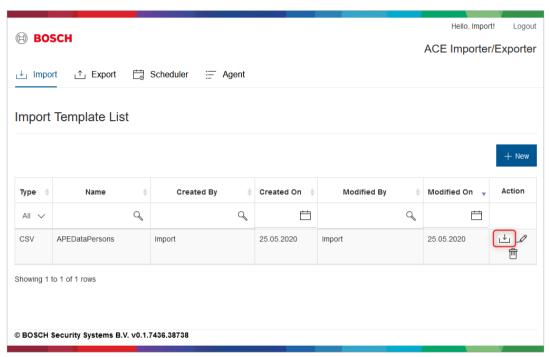


17. In the Immediate Import dialog box, under Choose file, select the data file (e.g. ACEAuthorizations.csv) that you want to import.

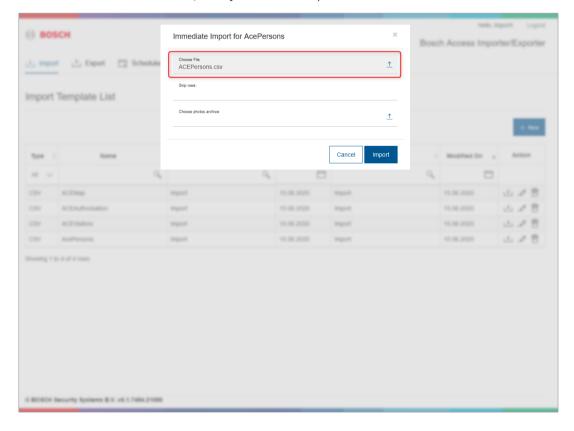

18. In the Immediate Import dialog box, under Choose photo archive, select the photo archive (e.g. Photos.zip) that you want to import.

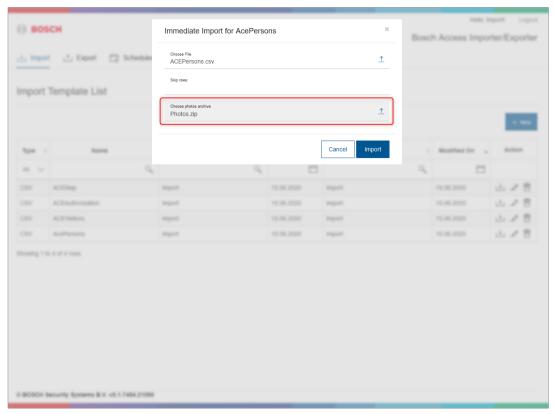

- 19. Click Import.
- You are automatically redirected to the Agent section and the import will start automatically.

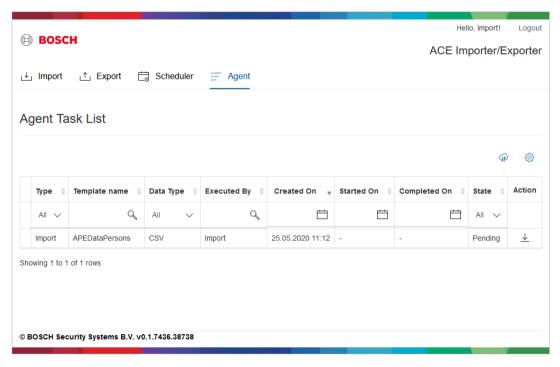



Notice!


Repeat steps 1 to 9 for ACEVisitors.csv and ACEAuthorizations.csv. For the ACEVisitors.csv file, the Photos.zip must be selected again.

Refer to


Configuring log files, page 17

Configuring log files 5


- 1. Start the AMS Import Export Tool.
- 2. Enter your User Name and Password, and click Log in.
- 3. Click on the **Agent** section.
- The **Preferences** dialog box opens.

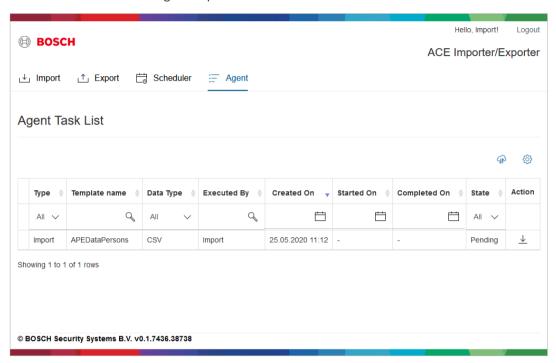


Under Agent credentials, enter the password.

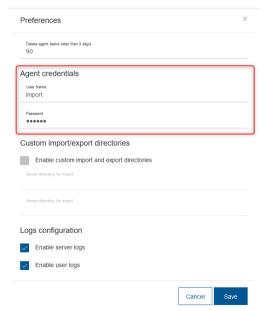

5. Select the selection boxes **Enable server logs** and **Enable user logs**.

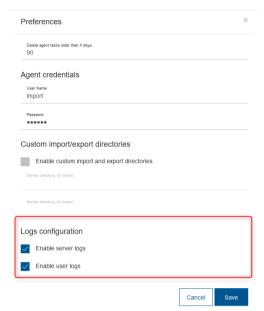

6. Click Save.

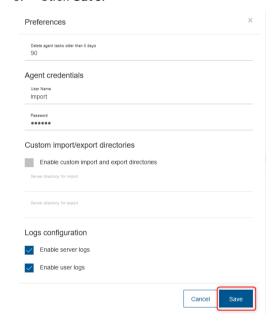

Refer to

- Importing the data, page 8

Detailed overview of the migrated data 6

ACEPersons.csv file

| Data type | Description | Example |
|--------------------------|---|------------------------------------|
| Persons.ExternalId | Reference ID created by the APE export tool | 15 |
| Persons.FIRSTNAME | First name of the person | Harry |
| Persons.LASTNAME | Last name of the person | Watkin |
| Persons.DATEOFBIRTH | Date of birth of the person | 20.05.1995 |
| Persons.IMAGE | Name of the JPEG file with the picture of the person | 000002.jpg |
| Persons.AUTHFROM | Starting date to the validity of the person | 01.04.2020 |
| Persons.AUTHUNTIL | Ending date to the validity of the person | 15.04.2020 |
| Persons.REMARK | Additional remark | Next week scheduled for new badge. |
| Persons.VIP | Defines whether a person is included or excluded from random screening (true = person excluded; false = person included); to be considered, random screening must be configured | True |
| Persons.PERSNO | User specific reference number | 12345 |
| Persons.PIN | Personal Identification Number (PIN) used in combination with a physical credential to enforce greater security | 001224 |
| Companies.COMPANYNO | Name of the company*2 | Bosch |
| Companies.NAME | Name of the company*2 | Bosch |
| Authorizations.SHORTNAME | Name of the authorization given to the person*3 | MainEntrance |
| Authorizations.NAME | Name of the authorization given to the person*3 | MainEntrance |
| Authorizations.ValidFrom | Starting date to the validity of the authorization given to the person | 19.02.2020 |

| Data type | Description | Example |
|---------------------------|--|------------|
| Authorizations.ValidUntil | Ending date to the validity of the authorization given to the person | 23.02.2020 |
| Cards.CARDNO | Part of the code data of the card that has been assigned to the person | 6754821 |
| Cards.Customercode | Part of the code data of the card that has been assigned to the person | 9000 |

^{*1} Verification PIN unencrypted; during the migration, PINs with 4 digits are converted to PINs with 6 digits by adding leading zeros to the 4 digit PIN (e.g. 001224).

Notice!



On APE, the default length of a PIN is of 4 digits. On ACE, the default length of a PIN is of 6 digits. During the migration, PINs with 4 digits are converted to PINs with 6 digits by adding leading zeros to the 4 digit PIN (e.g. 001234).

After the migration, readers that are running on AMS will always expect the 6 digit PIN. The user can either enter the leading zeros, or enter # or E. These digits can signalize to the reader that the input is finalized.

^{*2} Companies.COMPANYNO and Companies.NAME will always match. These data types are only differentiated on AMS, not on the APE system. You can update the data before starting the import, by editing the CSV file.

^{*3} Authorizations.SHORTNAME and Authorizations.NAME will always match. These data types are only differentiated on AMS, not on the APE system. You can update the data before starting the import, by editing the CSV file.

ACEVisitors.csv file

| Data type | Description | Example |
|---------------------------|--|------------------------------------|
| Visitors.ExternalId | Reference ID from the APE export tool | 14 |
| Visitors.FIRSTNAME | First name of the person | Sarah |
| Visitors.LASTNAME | Last name of the person | Watkin |
| Visitors.DATEOFBIRTH | Date of birth of the person | 25.08.1994 |
| Visitors.Image | Name of the JPEG file with the picture of the person | 000160.jpg |
| Visitors.AUTHFROM | Starting date to the validity of the person | 02.04.2020 |
| Visitors.AUTHUNTIL | Ending date to the validity of the person | 16.04.2020 |
| Visitors.REMARKS | Additional remark | Next week scheduled for new badge. |
| Companies.COMPANYNO | Name of the company*2 | Bosch |
| Companies.NAME | Name of the company*2 | Bosch |
| Authorizations.SHORTNAME | Name of the authorization given to the person*3 | MainEntrance |
| Authorizations.NAME | Name of the authorization given to the person*3 | MainEntrance |
| Authorizations.ValidFrom | Starting date to the validity of the authorization given to the person | 20.02.2020 |
| Authorizations.ValidUntil | Ending date to the validity of the authorization given to the person | 24.02.2020 |
| Cards.CARDNO | Part of the code data of the card that has been assigned to the person | 765532 |
| Cards.Customercode | Part of the code data of the card that has been assigned to the person | 9001 |

 $^{^{\}star 2}$ Companies.COMPANYNO and Companies.NAME will always match. These data types are only differentiated on AMS, not on the APE system. You can update the data before starting the import, by editing the CSV file.

 $^{^{*3}}$ Authorizations.SHORTNAME and Authorizations.NAME will always match. These data types are only differentiated on AMS, not on the APE system. You can update the data before starting the import, by editing the CSV file.

ACEAuthorizations.csv file

Permissions that have not been assigned to anyone will be found in this file. Authorizations.SHORTNAME and Authorizations.NAME will always match. These data types are only differentiated on AMS, not on the APE system. You can update the data before starting the import, by editing the CSV file.

| Data type | Description | Example |
|--------------------------|---|--------------|
| Authorizations.SHORTNAME | Name of the authorization given to the individual | MainEntrance |
| Authorizations.NAME | Name of the authorization given to the individual | MainEntrance |

7 Restrictions

Data fields that are not migrated

| Data field in APE | Description | Data field in AMS*4 |
|--------------------|---|------------------------|
| Title | Job of a person, or a word used before the name to indicate the status of a person | Title |
| Memo | Additional note about the person | Remarks |
| Phone | Phone number of the person | Phone |
| External cardno | External card number given by the person | Does not exist in AMS. |
| Version | Administrative version of the card number | Version |
| Identification PIN | Personal Identification Number (PIN) that is the sole credential required for access | Identification PIN |
| Arming PIN | Personal Identification Number (PIN) that is used to arm an entrance | Arming PIN |
| Blocked persons | Person or list of persons who are blocked from an entrance | Blocking |

^{*4} Dialog path: Main menu > Personnel data > <sub-dialogs>

Notice!



For detailed information on how to manually configure the data in AMS, see chapter Creating and managing personnel data, in the AMS Configuration and Operation manual. The AMS Configuration and Operation manual can be found in the Help file of AMS, or in the Bosch Security Systems online product catalog, in the AMS product page, under Downloads > Literature.

Other restrictions

- Cards to activate threat alert are imported as standard cards and will get the authorizations given to the cardholder.
- The migration of VIP flags works as follows:
 - Persclass must contain VIP
 - During the migration, the ExcludeFromRandomAccess flag will be set in AMS
 - Other VIP features will not be migrated. The chosen name with VIP is not relevant.
- Time models assigned to a person will not be migrated. (Create a new list and assign the time models manually on AMS.)
- Company names longer than 50 characters will not be migrated, i.e. the company name will be skipped.

- On the Company field with CR (carriage return), data until carriage return will be migrated (maximum of 50 characters).
- Persons.AUTHUNTIL will be changed from Date only format (e.g. 31.12.2020) to Date+Time format (e.g. 31.12.2020 00:00). Time is set to 00:00 by default. This means, the validity of the person will end at the beginning of the day.
- APE has two default personnel classes: "Employee" and "Visitor". It is possible to create new, customized personnel classes (e.g. "VIPEmployee" or "Foreign worker") in APE.

During the migration, only default personnel classes are assigned. New, customized personnel classes from APE are either mapped to personnel class "Employee" or to personnel class "Visitor" during the migration.

Bosch Security Systems B.V.

Torenallee 49 5617 BA Eindhoven Netherlands

www.boschsecurity.com

© Bosch Security Systems B.V., 2024